HOME
DECORATORS
C O L L E C T I O N

HDC# 15873 MFG# TW-19212AW / TW-19212DW
COROLLARY SHOE STORAGE 19"Hx52"W

ASSEMBLY INSTRUCTIONS

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.

Made In China

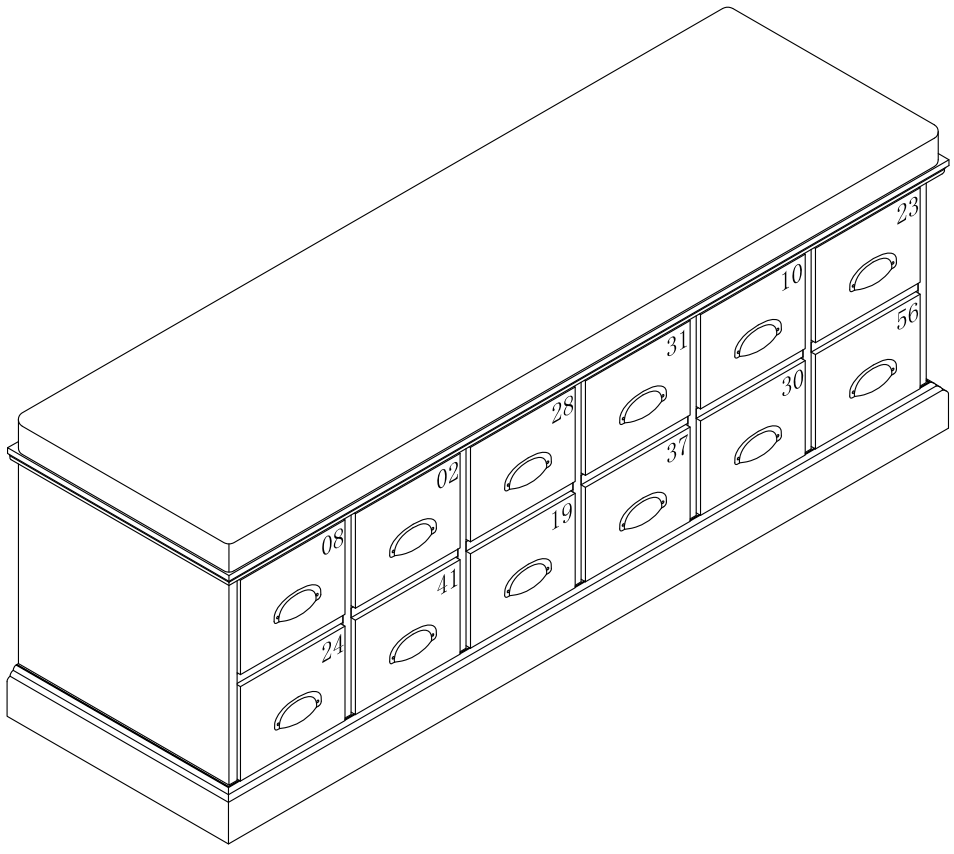

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

ASSEMBLY TOOLS REQUIRED

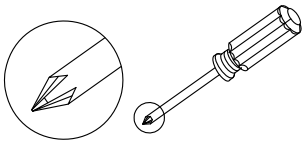

"+"Screw driver

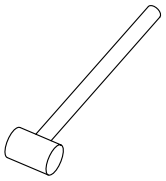

Rubber Mallet

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND
PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

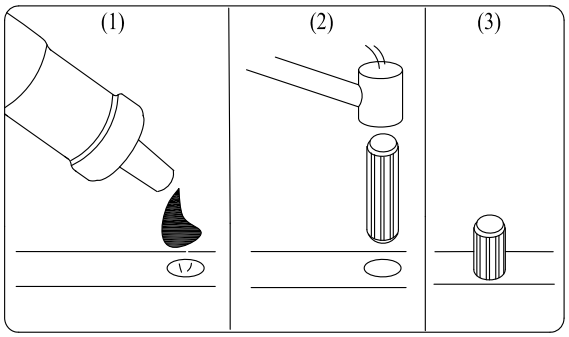

HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.
TOOL NEEDED: ″+″ SCREW DRIVER
STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A ″+″ SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).
STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER MALLET GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.
STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A ″+″ SCREWDRIVER.

DETAIL STEP PLEASE SEE THE BELOW PICTURE.

VERTICAL CONNECTION		HORIZONTAL CONNECTION	
(1) (A) 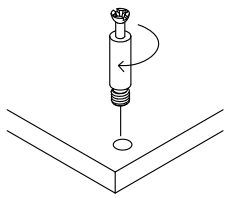	(2) 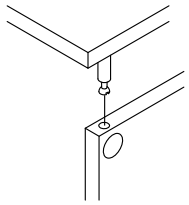	(1) (A) 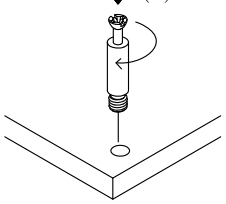	(2) 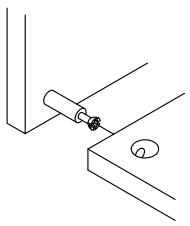
(3) 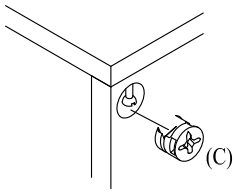 (C)	(4) 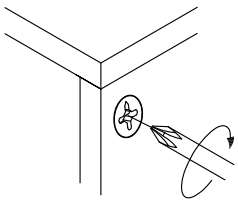	(3) (C) 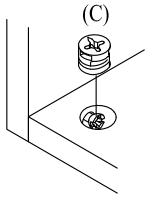	(4) 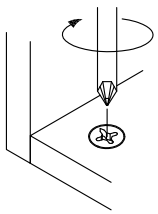
(5) 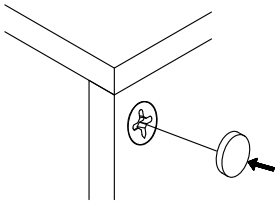		(5) 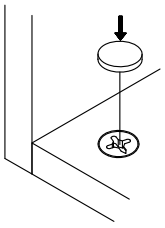	

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

HARDWARE LIST

WOOD DOWEL 32 PCS  (1)	CAM-BOLT CAM-LOCK 22 SETS  (2)	KNOB BOLT 12 SETS  (3)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 10 SETS  (4)	FLAT HEAD SCREW DRAWER LIMIT STOPPER 12 SETS  (5)
FLAT HEAD SCREW 96 PCS (6)	ROUND HEAD SCREW 18 PCS (7)	ALLEN KEY 1 PC  (8)	GLUE 1 PC  (9)	

PARTS LIST

BOX 1

TOP FRAME 1 PC 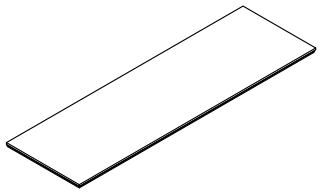 A	BOTTOM FRAME 1 PC 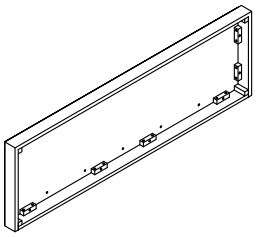 B	SHELF 1 PC 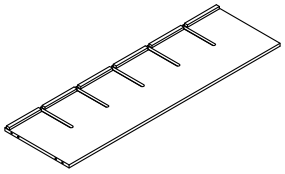 C
BACK PANEL 1 PC 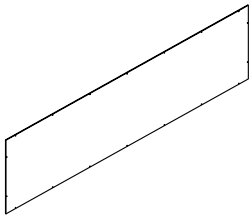 D	CUSHION 1 PC 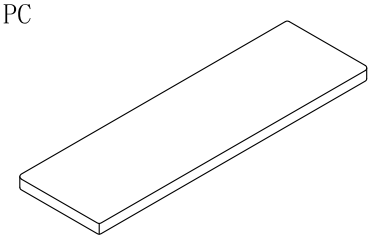 E	

BOX 2

LEFT SIDE PANEL 1 PC  F	RIGHT SIDE PANEL 1 PC  G	MIDDLE PANEL 5 PCS  H
DRAWER FRONT PANEL 12 PCS  I	DRAWER SIDE PANEL 24 PCS 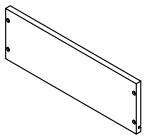 J	DRAWER BACK PANEL 12 PCS  K
DRAWER BOTTOM PANEL 12 PCS  L		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

STEP 1: ASSEMBLE DRAWER LIMIT STOPPER (5)

- USE FLAT HEAD SCREW (5) TO ATTACH DRAWER LIMIT STOPPER (5) ONTO TOP FRAME (A).
- USE FLAT HEAD SCREW (5) TO ATTACH DRAWER LIMIT STOPPER (5) ONTO SHELF (C).

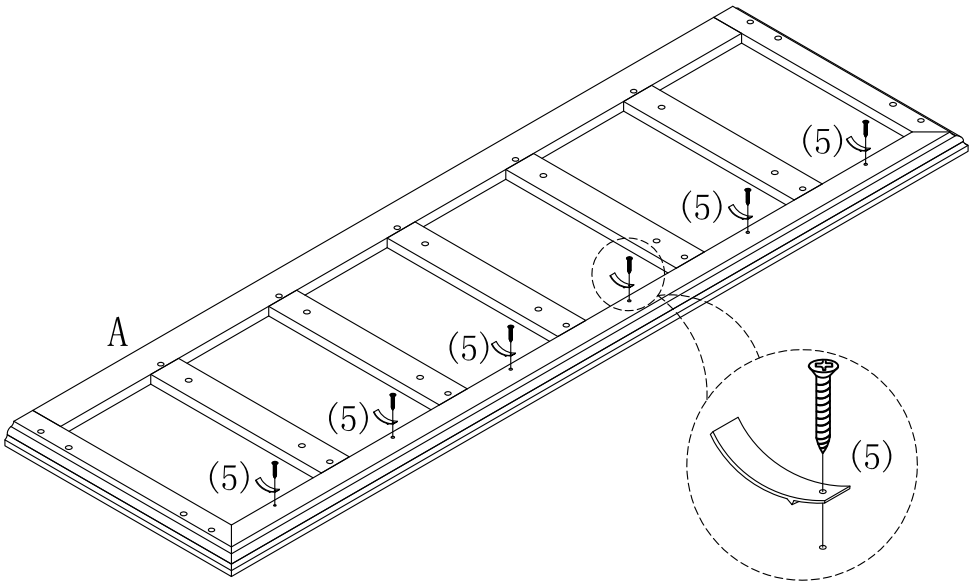

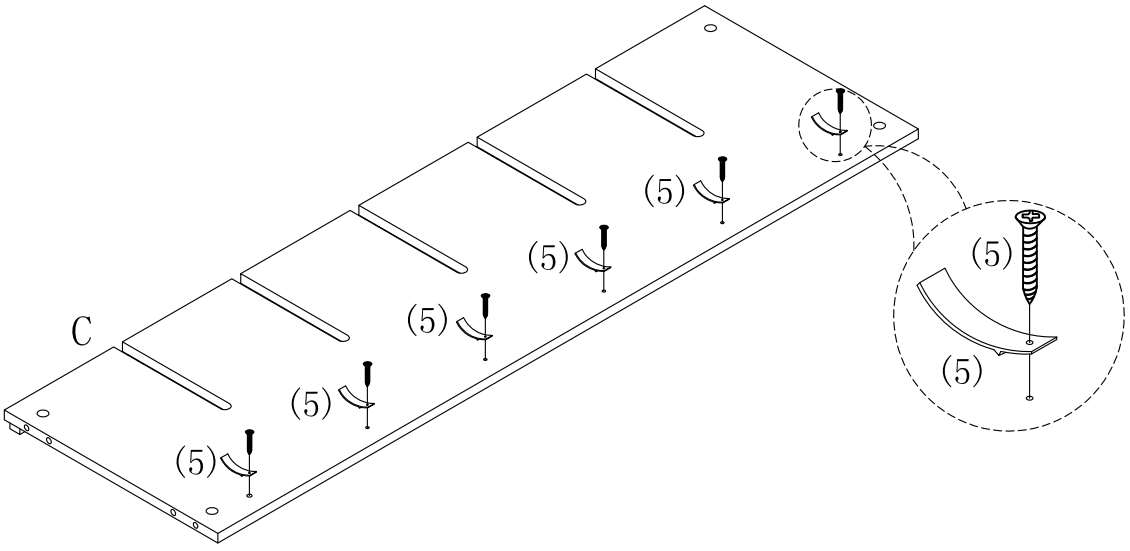

STEP 2: ASSEMBLE SIDE PANEL (F & G) AND SHELF (C)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM-BOLT & CAM-LOCK (2) AND WOOD DOWEL (1) TO ASSEMBLE SIDE PANEL (F & G) AND SHELF (C) TOGETHER AS SHOWN.

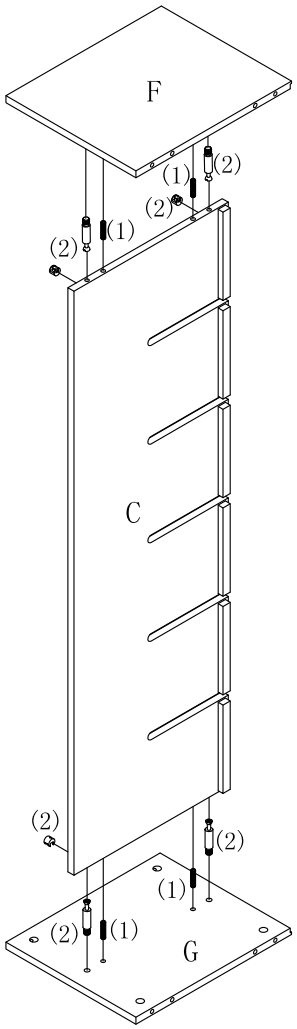

STEP 3: ASSEMBLE MIDDLE PANEL (H)

- INSERT MIDDLE PANEL (H) ACROSS THE SHELF (C).

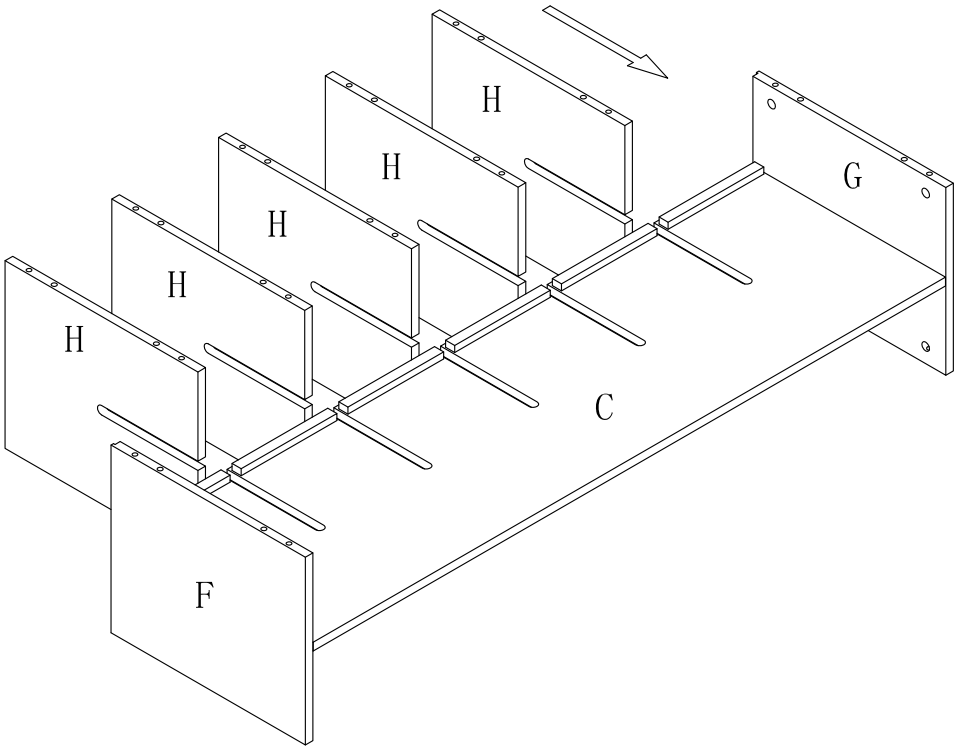

STEP 4: ASSEMBLE BOTTOM FRAME (B)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM-BOLT & CAM-LOCK (2), WOOD DOWEL (1) AND ROUND HEAD BOLT & FLAT WASHER & SPRING WASHER (4) TO ASSEMBLE BOTTOM FRAME (B), SIDE PANEL (F & G) AND MIDDLE PANEL (H) TOGETHER BY ALLEN KEY (8) AS SHOWN.

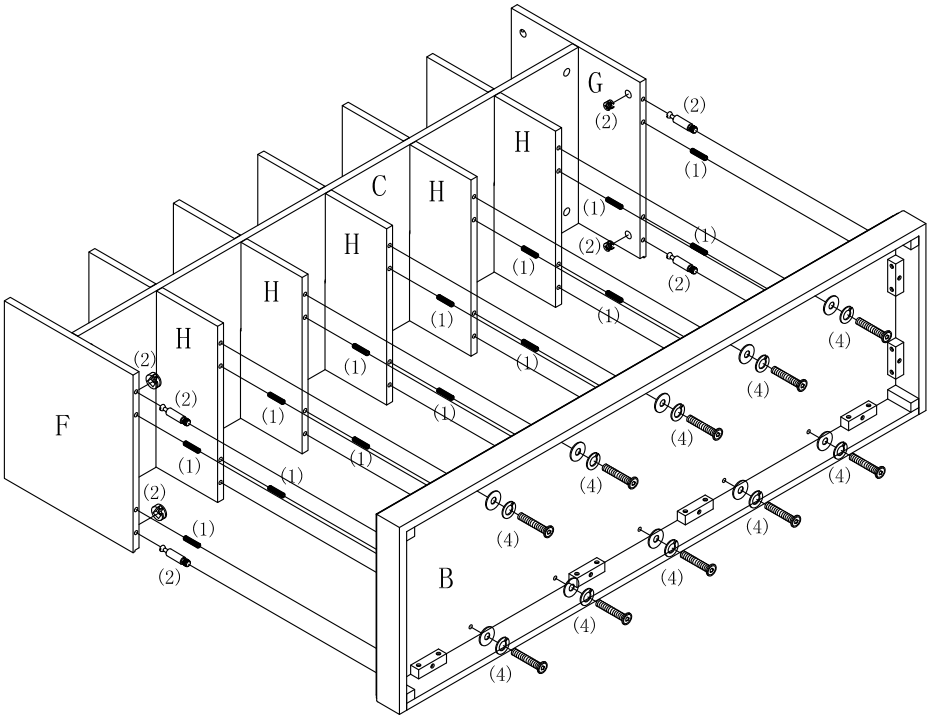

STEP 5: ASSEMBLE TOP FRAME (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM-BOLT & CAM-LOCK (2) AND WOOD DOWEL (1) TO ASSEMBLE TOP FRAME (A), SIDE PANEL (F & G) AND MIDDLE PANEL (H) TOGETHER AS SHOWN.

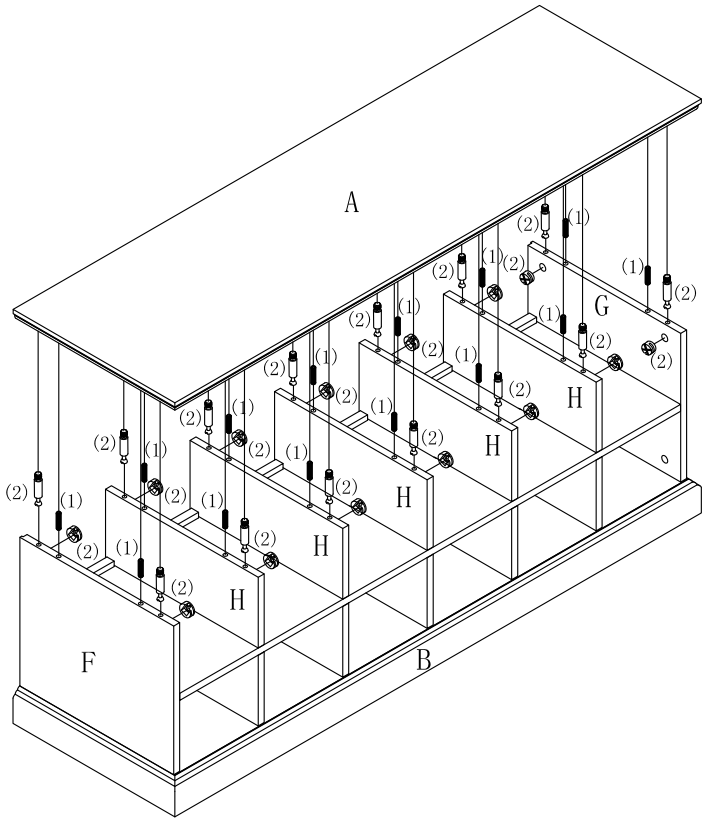

STEP 6: ASSEMBLE DRAWER

- USE SCREW (6) TO ATTACH DRAWER SIDE PANEL (J) AND BACK PANEL (K) TOGETHER.
- INSERT DRAWER BOTTOM PANEL (L) INTO THE SLOTS OF SIDE PANEL (J).
- USE SCREW (6) TO ASSEMBLE DRAWER SIDE PANEL (J) AND DRAWER FRONT PANEL (I) TOGETHER.
- USE ROUND BOLT (3) TO ATTACH KNOB (3) ONTO DRAWER FRONT PANEL (I).
- INSERT THE PRE-ASSEMBLED DRAWERS INTO THE PRODUCT BODY PROPERLY AS SHOWN.

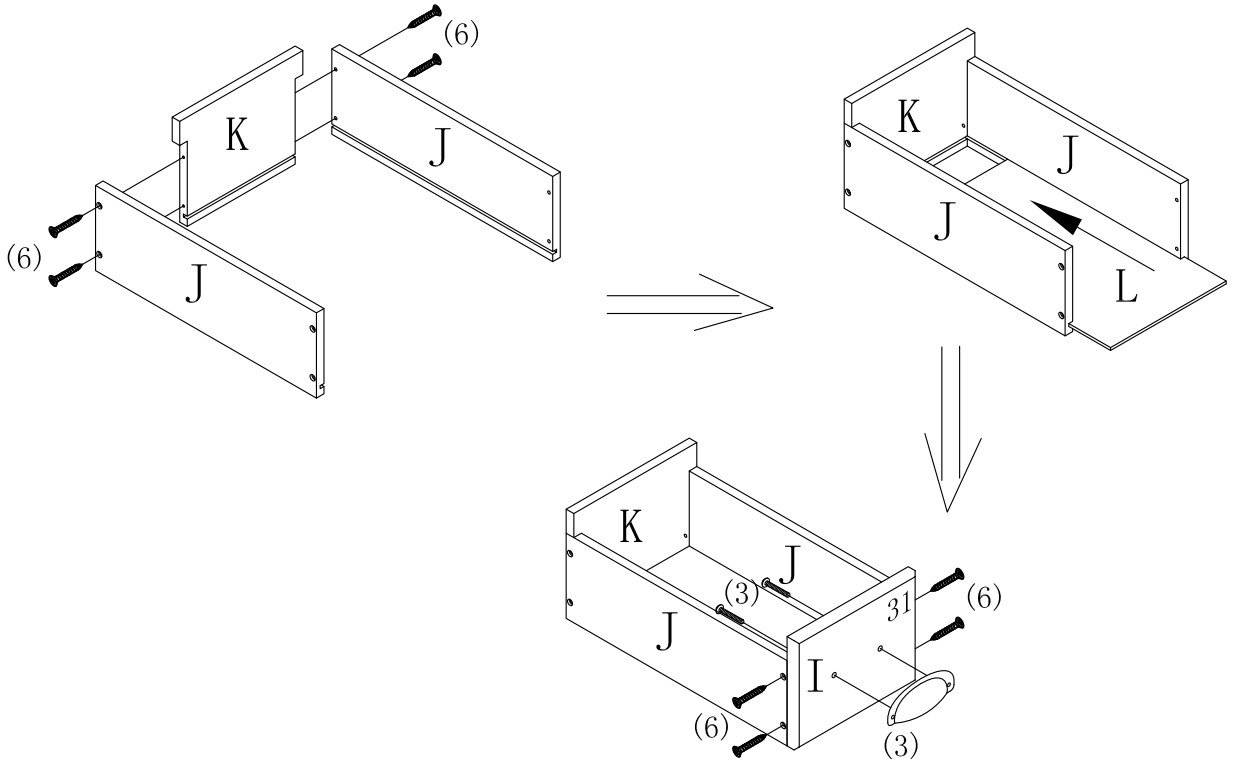

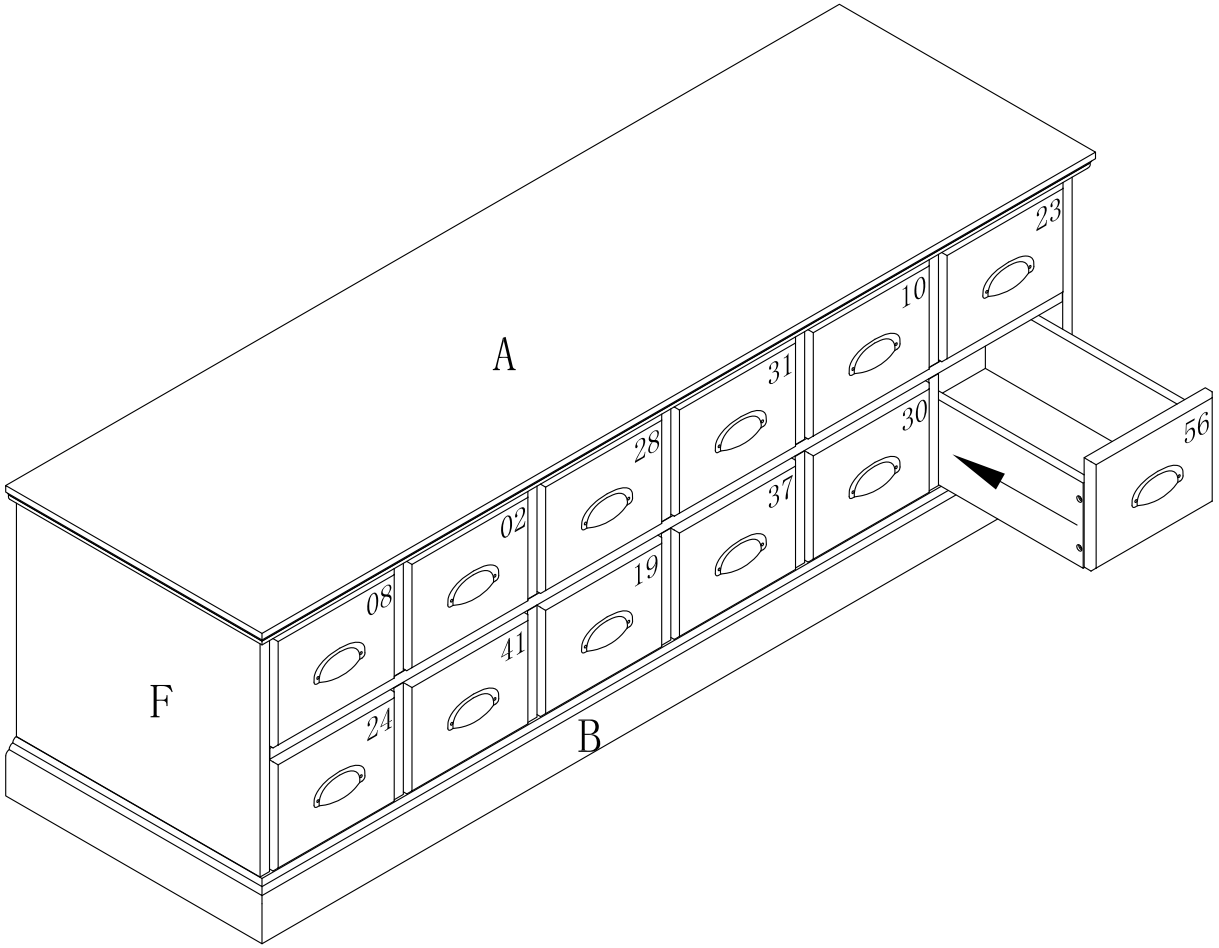

STEP 7: ASSEMBLE BACK PANEL (D)

• USE ROUND HEAD SCREW (7) TO ATTACH BACK PANEL (D) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE: PLEASE MAKE SURE TWO SIDE PANELS ARE PERPENDICULAR TO THE BOTTOM PANEL AND SIDE PANELS ARE PARALLEL.

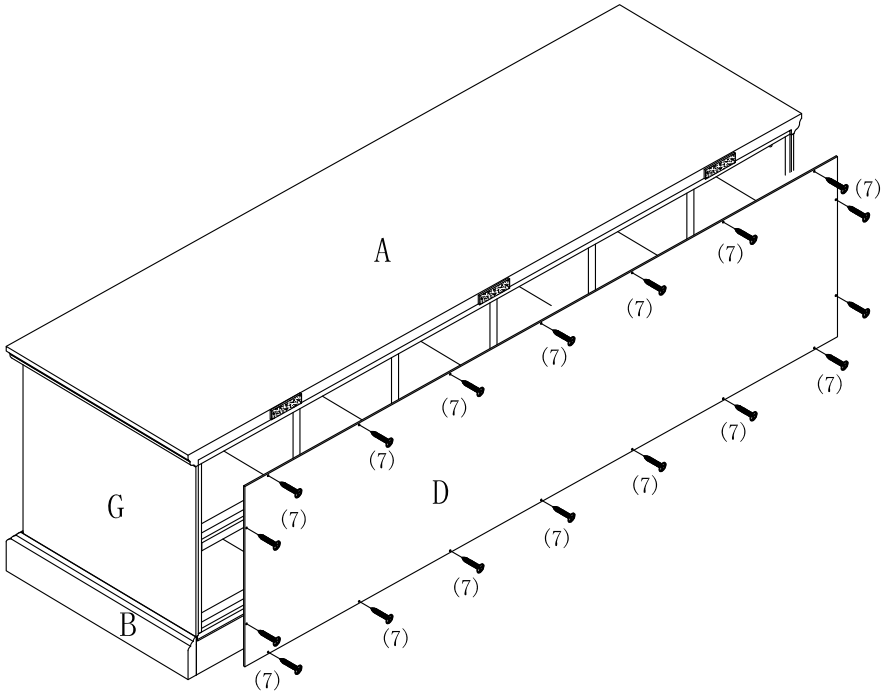

STEP 8: ASSEMBLE CUSHION (E)

• PUT CUSHION (E) ONTO THE TOP FRAME (A) AND APPLY VELCRO PROPERLY.